Arcade instructions

To start:

- 1) Turn switch on (under arcade console).
- 2) Turn amp on, and set volume.
- 3) Use blue joystick to scroll systems.
- 4) Use blue "A" to select.
- 5) Use blue "B" to go back.
- 6) Use blue "X" to select a random game.
- 7) Use blue "LS" or "RS" to scroll up or down.
- 8) Use blue "Select" to search games by first letter.
- 9) Use blue joystick to scroll to game, and blue "A" to select.
- 10) Use blue "Select" to add coins/credits.
- 11) Use blue "Start" to start the game.
- 12) Use "Start" buttons of each color to choose players.
- 13) Use blue "Select & Start" (at the same time) to return to the game list.
- 14) Use blue "B" to go back to the main menu.
- 15) Use blue "Select" to go to the screen saver.
- 16) Use blue "B" to go back to the main menu.

To shut down:

- 1) Use blue "Start".
- 2) Use blue joystick to scroll to "Quit". Use blue "A" to select. Use blue joystick to scroll to "Shutdown System". Use blue "A" to select. Use blue "A" to select "Yes" when prompted.
- 3) Turn switch off (under arcade console).